

TPMS



Your one-stop source for TPMS replacement parts!

- Complete coverage for various vehicles in America and Europe.
- Direct fit, no sensor programming required.
- Follow OE re-learn procedures.
- Compatible with all major TPMS scan tools.

OE qualified manufacturer on TPMS

Installation procedures

1. Dismount tire and sensor from the wheel.
2. Clear valve stem hole in rim of any corrosion or dirt.
3. Remove washer, nut and cap from the valve stem.
4. Push the valve stem thru the rim, install the washer and nut, then tighten the nut to 36 in-lb (4 N.m).
5. Hold the sensor body against the rim (as shown in figure Fig. 1 below) and then tighten the screw to 20 in-lb (2.2 N.m).
6. Follow up the same re-learn procedures instructed by car makers


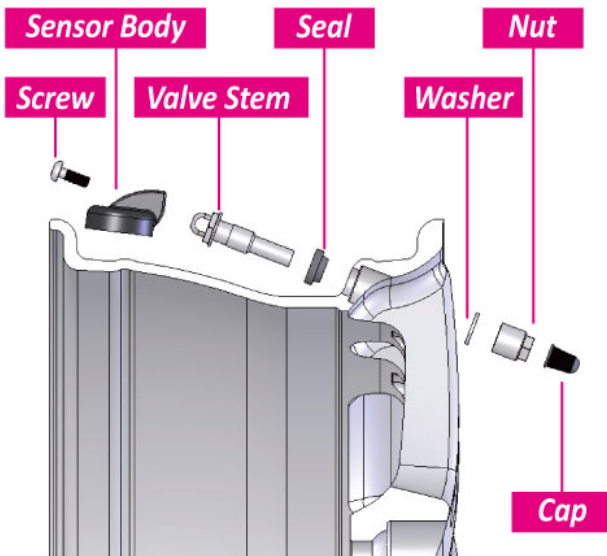


Fig. 1

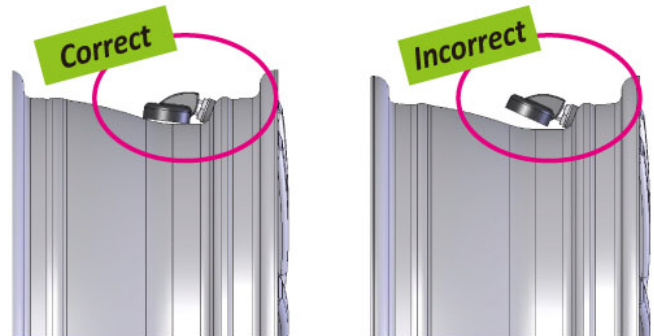

Transmitter Specification

Frequency	315 / 433 MHz
Pressure range	0~80 PSI (+/-1PSI)
Temperature range	-40°C~115°C
Operating humidity	Max. 95 %
Operating temperature	-40°C~115°C
Storage temperature	-40°C~125°C
Dimension	85.5(L) x 61.5(W) x 20.5(H) cm
Weight	45g
Adjustable angle	0~40 degrees

Headquarters - Taiwan

Mobiletron Electronics Co., Ltd.
85, Sec.4, Chung-Ching Road, Ta-Ya District,
Taichung City 428, Taiwan
Tel: +886 4 25607389
Fax: +886 4 25673069
E-mail: mobiletron@more.com.tw
<http://www.more.com>

M103-10

America

Regitar U.S.A. Inc.
Tel: +1 334 2441885
E-mail: info@regitar.com

China

Mobiletron Electronics (Ningbo) Co., Ltd.
Tel: +86 574 62760669
E-mail: info@mobiletron.com.cn

Europe

Mobiletron UK Ltd. Preston
Tel: +44 1772 693780
E-mail: info@mobiletron.co.uk

ISO/TS 16949:2002

